

Superior quality since
1984

Owners Manual

JACK STANDS

BORUM

INDUSTRIAL WORKSHOP EQUIPMENT

**INDUSTRIAL
QUALITY**



Specifications

15TJ

- Safe Working Capacity: 15,000kg
- Max Height: 1077mm
- Min Height: 645mm
- Base Dimensions: 460 x 460mm

15TJSSHORT

- Safe Working Capacity: 15,000kg
- Max Height: 631mm
- Min Height: 445mm
- Base Dimensions: 300 x 300mm

25TJ

- Safe Working Capacity: 25,000kg
- Max Height: 968mm
- Min Height: 680mm
- Base Dimensions: 460 x 460mm

25TJSSHORT

- Safe Working Capacity: 25,000kg
- Max Height: 539mm
- Min Height: 415mm
- Base Dimensions: 300 x 300mm

About the Borum brand

Our **“heavy duty commercial”** range of Borum Industrial equipment has been manufactured to exacting standards for the past **34 years**. We specify industrial quality components and design to ensure a long and durable working life in **commercial transport, mining, earthmoving and railway** environments. Our Borum Industrial range of equipment is focused on achieving superior professional standards, reliability, quality, and are covered by a **12 month trade use warranty**.

WARNING INFORMATION



IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE

WARNING

The instructions and warnings contained in this manual should be read and understood before using or operating this equipment. Do not allow anyone to use or operate this equipment until they have read this manual and have developed a thorough understanding of how this equipment works. Failure to observe any of the instructions contained in the manual could result in severe personal injury to the user or bystanders, or cause damage to the equipment and property. Keep this manual in a convenient and safe place for future reference.

The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Whilst every effort has been made to ensure accuracy of information contained in this manual, the Borum policy of continuous improvement determines the right to make modifications without prior warning.

CONTENTS

WARNING INFORMATION.....	1
STANDARD OPERATING PROCEDURE	2
ASSEMBLY, OPERATION, PREVENTITIVE MAINTENANCE.....	3
WARRANTY.....	5

STANDARD OPERATING PROCEDURE

DO NOT use this machine unless you have been trained and assessed to a competent level in its safe use and operation, and have been given permission to use this



Safety glasses must be worn when operating this equipment



Long loose hair must be contained when operating this equipment



Safety footwear must be worn when operating this equipment







Close fitting/protective clothing must be worn when operating this equipment

PRE-OPERATIONAL SAFETY CHECKS

1. Study, understand, and follow all instructions before operating this device.
2. Retain these instructions for future reference.
3. The equipment described in this manual could be potentially dangerous if improperly or carelessly operated. For the protection of all persons and equipment, only competently trained operators who are critically aware of the proper operating procedures, potential dangers, and specific application of this equipment should be allowed to use this equipment at any time.
4. Because of potential hazards associated with this type of equipment, no alterations shall be made to this product.
5. Failure to heed all warnings contained in this manual may result in personal injury and/or property damage.
6. All warranties applicable to this equipment are contingent on strict adherence to the operation and maintenance procedures in this manual.

OPERATIONAL SAFETY CHECKS

1. Check vehicle owner's manual for correct vehicle weight - DO NOT exceed axle stand safe working capacity.
2. Use only as specified by the manufacturer.
3. Use no more than a single pair of axle stands.
4. Use only on a hard, level surface.
5. Securely chock wheels remaining on the ground.
6. Ensure that each stand is securely located under a strong point on the vehicle - consult vehicles owner's manual for guidance.
7. Upper and lower columns are to be used as a pair as supplied.
8. For your safety, do not modify or alter this jack stand.
9. When servicing, use only Borum identical replacement parts. Use of any other parts will void the warranty.
10. Use the right product for the job. There are certain applications for which the Jack Stand was designed. Do not modify the Jack Stand and do not use the Jack Stand for a purpose for which it was not intended.

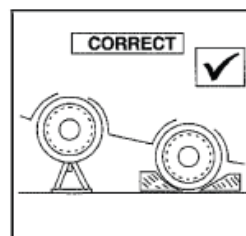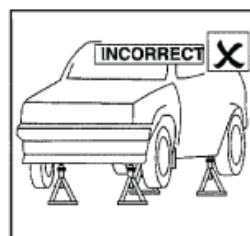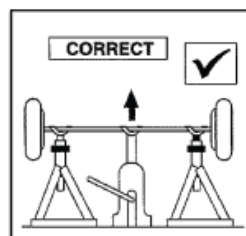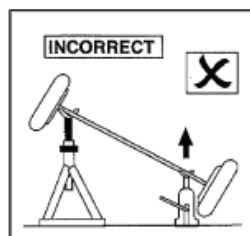


ASSEMBLY, OPERATION, PREVENTITIVE MAINTENANCE

1. FEATURES & MODELS

The BORUM Ultra Heavy Duty Jack Stand is a reinforced pin style jack stand with industrial quality design and support bracing system to sustain heavy loads up to 15,000kg or 25,000kg.

2. ASSEMBLY INSTRUCTIONS

1. Install centre column into base assembly with controlled pin aligned with the appropriate hole in the centre column.
2. Move the centre column to its lowest position by removing the controlled pin and guiding the column downward.
3. Secure the centre column into the base assembly by pushing the controlled pin firmly through the hole in the centre column.

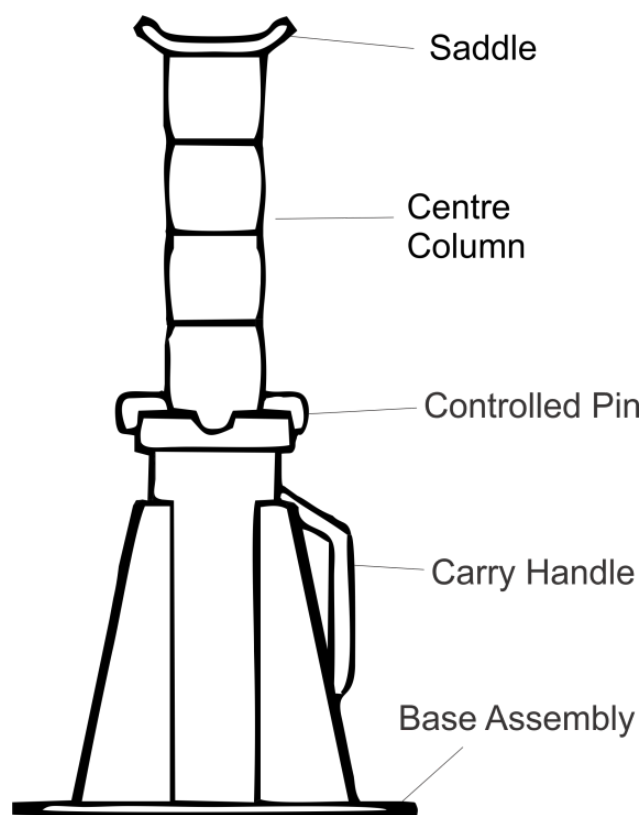

3. BEFORE USE

1. Make initial inspection of support stand before each use. DO NOT use if components are bent, broken or cracked. Ensure all parts move freely.
2. Verify that the product and the application are compatible.
3. Before using this product, thoroughly read this owner's manual and familiarise yourself with the product and the hazards associated with improper use.
4. Always check the vehicle owners or service manual for location of proper lift and support points.

4. OPERATION

Prior to each use always conduct a visual inspection checking for and any abnormal conditions, such as cracked welds, and damaged, loose, or missing parts.

To Support Vehicle:

1. Adjust and set the height by pushing the controlled pin through appropriate hole ensuring the pin is fully engaged.
2. Raise the vehicle and carefully position the jack stand so that the load is centred on the stand's saddle.
3. Slowly lower the vehicle onto the stand - securely chock wheels remaining on the ground.
4. Before starting work ensure the vehicle is fully secured.



WARNING

1. The stands must always be positioned on a hard level surface eg: concrete.
2. The safe working load must not be exceeded under any circumstances.
3. Always centre the load on the centre column saddle
4. Use as a pair to support one end of vehicle only

To Lower Vehicle:

1. Raise vehicle with jack clear of jack stand.
2. Carefully release the controlled pin and lower the centre column slowly to the lowest position. DO NOT allow to drop.
3. Remove stand then carefully lower vehicle to the ground.
4. Ensure that all tools, equipment and personnel are clear before lowering the load.

5. MAINTENANCE

This product shall be maintained in accordance with the following;

1. Periodically inspect each support stand. Ensure all parts move freely.
2. DO NOT apply oil or grease to any portion of this product.
3. If rust appears, sand affected are and recover with a suitable primer and paint.
4. This product has no replacement parts.

6. STORAGE

These Jack Stands should always be stored in a dry indoor location on a level surface in the upright position.

7. SERVICE & REPAIR

Any Jack Stand found damaged in any way, or found to be worn or operates abnormally should be removed from service until repaired by an authorised service agent. Owners and / or operators should be aware that repair of this product may require specialised equipment and knowledge. Only authorised parts, labels, decals shall be used on this equipment. Annual inspection of the Jack Stands is recommended and can be made by an authorised repair facility to ensure that your equipment is in optimum condition and that the equipment has the correct decals and safety labels specified by the manufacturer.

WARRANTY

BORUM Industrial products have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship for a period of 12 months from the date of purchase except where tools are hired out when the guarantee period is ninety days from the date of purchase.

Should this piece of equipment develop any fault, please return the complete tool to your nearest authorised warranty repair agent or contact TQB Brands Pty Ltd Warranty team – warranty@tqbbrands.com.au.

If upon inspection it is found that the fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. This guarantee does not apply to normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accident, or repairs attempted or made by any personnel other than the authorised TQB Brands Pty Ltd repair agent.

This guarantee applies in lieu of any other guarantee expressed or implied and variations of its terms are not authorised.

Your TQB Brands Pty Ltd guarantee is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the 12month period.

Consumer Guarantee

Our goods come with a guarantee that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



All images and illustrations shown are for reference purposes only. All information, specifications and illustrations in this manual are based on the latest information available at the time of publication and are subject to change without notice. The information in this manual is periodically revised to ensure the latest information is included. Download the latest version of this manual and other related technical documentation from www.tqbbrands.com.au